

Acuview Software Demo Instructions

Acuview software is setup and reporting software that works with any Acuvim power meter with MODBUS communications.

You can download a copy of the software to evaluate. A remote demonstration meter is available for you to connect to. Instructions and a demonstration video on how to use the software is available to help you.

Downloading the Software

You can download the Acuview software here:

www.K-Tech.com/Accuenergy/software/acuview.exe

Connecting to the Meter

Once you have installed the Acuview Software, use the Connection Manager to setup the following connection:

Set the 'TYPE' of connection to 'Network' and enter the following settings:

IP Address 76.65.212.248

Modbus Port 502

Scan Interval 500 (this is the number of milliseconds between updates)

Click 'OK' when you are done.

Connecting to the Meter

Once you have installed the Acuview Software, use the Connection Manager to setup the following connection:

Set the 'TYPE' of connection to 'Network' and enter the following settings:

IP Address 76.65.212.248

Modbus Port 502

Scan Interval 500 (this is the number of milliseconds between updates)

Click 'OK' when you are done.

Finally, click the 'Connection' link in the menu and choose 'Connect'.

You are now connected to an Acuvim II meter located in Toronto, Canada.