

UM-45

**2V DC to 200V DC Meter
4 1/2 DIGIT with 0.56" LEDs
in a Traditional NEMA Style Case**



0.56" LEDs

A utility meter, for high resolution single or differential DC voltage measurement, that can be easily scaled to any process engineering units of measure.

General Features


The UM-45 is an economical, high resolution DC voltage measuring meter with three header selectable full scale ranges of 2V, 20V and 200V. A five position Span Adjust header facilitates scaling to almost any process engineering unit of measure.

The standard meter has a high efficiency red LED display and user selectable AC power inputs of 100V AC to 120V AC or 200V AC to 240V AC are provided. An Optional 24V AC or an auto sensing isolated AC/DC 24V switching power supply can be ordered.


The standard meter is provided with TB-KIT screw terminal blocks and insulated quick-disconnects. For the greatest convenience and ease of use, order the optional preconfigured Push-On screw terminal connectors. (see Push-On Screw Terminals and Ordering Information)

Typical Application Connections

DC Volts Single-ended measurement with a Resolution of 10 millVolt.

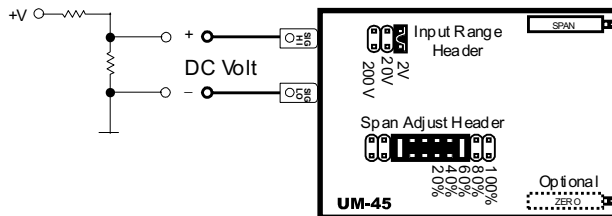

DC Volts Differential measurement with a Resolution of 10 milliVolt.

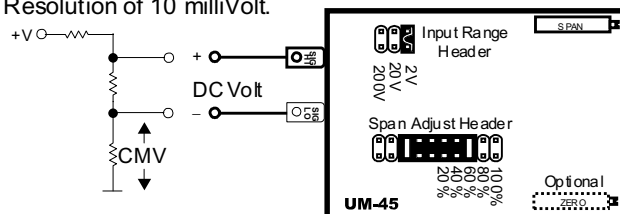

Max CMV (common mode voltage) = 50V*

Compatibility

The UM-Series NEMA case style is complementary to Texmate's Classic RP-Series. For economy, each UM model is dedicated to a specific application. UMs are ideal for upgrading or replacing the traditional USA NEMA case panel meters presently in use.

**Traditional
NEMA
STYLE USA
CASE**

Specifications

Input Configuration:Single-ended, however the isolated power Provision for optional zero pot to offset the reading displayed. supply enables differential measurements up to a maximum common mode of 50V.* (See Ordering Information)

Full Scale Ranges:Three built in header selectable ranges of $\pm 2V$ DC, $\pm 20V$ DC & $\pm 200V$ DC FS

Input Impedance:1M Ω minimum

A/D Converter:16 Bit Dual Slope

Accuracy: \pm (0.05% of reading + 3 digits)

Temp. Coefficient:100ppm/ $^{\circ}$ C (Typical)

Warm Up Time:2 minutes to specified accuracy

Conversion Rate:3 readings per second

Display:0.56" high efficiency LED Display Hold and Test Function

Polarity:Bipolar. Assumed +, displays -

Decimal Selection:Header under face plate, X•X•X•X•

Overload Indication:When input exceeds the full scale on any range being used, the meter displays flashing "0000"

Power Supply (std):120/240V AC, 50/60 Hz. approx 2.5W.

(Optn) VO-DC/ISOIsolated Switcher 9 to 36V DC/12 to 24V AC

(Optn) VO-24VIsolated Transformer 24V AC $\pm 10\%$

(Optn) VO-5V DCNon-isolated 5V DC $\pm 10\%$

Operating Temp.:-10 to 50 $^{\circ}$ C

Storage Temperature:-20 to 70 $^{\circ}$ C.

Relative Humidity:95% (non-condensing)

Case Dimensions:Bezel 4.06"Wx1.89"H (102.7Wx47.9Hmm) Depth behind bezel 3.64" (92.22 mm) Plus 0.5 to .9" (12.7 to 22.8mm) depending on connector used.


Weight:10oz., 13oz. when packed.

UM-Series low cost utility meters for switchboard and process indication

- UM-35AC1/5 AC amps, Scaled RMS, (1 or 5 Amp internal shunt), 3.5 digit
- UM-35AC AC volts, Scaled RMS. 199.9V AC/500V AC Header Selectable Ranges, 3.5 digit
- UM-40AC AC volts, Scaled RMS. 500.0V AC full scale, high resolution 4 digit
- UM-35HZ 15Hz to 199.9Hz or optionally 40Hz to 500Hz up to 500V AC input, 3.5 digit
- UM-35 DC Volts $\pm 2/20V$ DC Header selectable or optionally $\pm 2/200V$ DC, 3.5 digit
- UM-35MV DC mV $\pm 50mV$ and $\pm 100mV$ select inputs to suit DC current shunts, 3.5 digit
- UM-45 DC Volts $\pm 2V/\pm 20V/\pm 200V$ DC Header selectable ranges 4.5 digit
- UM-45MV DC mV ± 50 mV, $\pm 100mV$, or $\pm 200mV$ selectable inputs to suit DC current shunts, 4.5 digit



- UM-35CL Process 4 to 20mA (100.0), easily user scalable, 3.5 digit
- UM-35CLE Process 4to20mA (100.0) with 24V DC excitation, easily user scalable in engineering units anywhere from -1999 to +1999. 3.5 digit
- UM-45CL Process 4 to 20mA (100.00), easily user scalable, 4.5 digit
- UM-35P Pressure, strain gage and load cell, 4 and 6 wire, 5V DC excitation, Header Selectable Sensitivity 2mV/V, 5mV/V, 10mV/V, 20mV/V, 3.5 digit
- UM-35J/K J or K thermocouple input, 1 $^{\circ}$ resolution, order $^{\circ}$ C or $^{\circ}$ F, 3.5 digit
- UM-35RTD 100 Ω platinum RTD, 3 or 4 wire, order $^{\circ}$ C or $^{\circ}$ F and 0.1 $^{\circ}$ or 1 $^{\circ}$, 3.5 digit

Functional Diagram

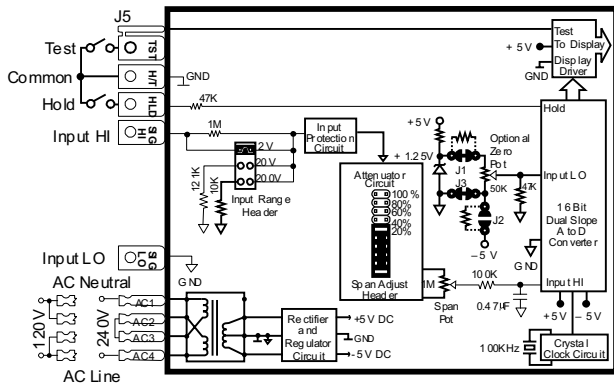

Connector Pinouts

UM-Series are connectable using the TB-KIT screw terminal blocks provided with the meter. For greatest convenience, order a Texmate Push-On screw terminal connector. Alternatively, a pcb edge connector can be used. (see connector options)

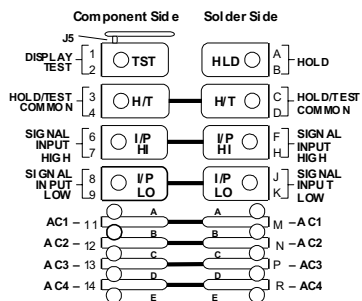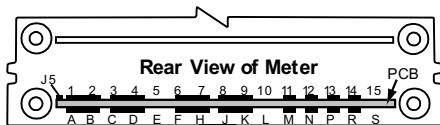

WARNING: AC and DC input signals and power supply voltages can be hazardous. Do Not connect live wires to screw terminal plugs, and do not insert, remove or handle screw terminal plugs with live wires connected.

Pins 1 & 2 - Display Test: All numeric display segments will light up when this pin is connected to the H/T Common Pin. When a TB-KIT Screw Terminal is used the Display Test function will operate unless J5 is cut which cancels test and enables the Hold function.

Pins 3, 4, C & D - H/T Common Pin: The Hold and Display Test pins have to be connected to this pin to activate their respective functions.

Pins A & B - Hold Reading: When this pin is connected to the H/T Common pin, A/D conversions will continue, but the display will not be updated until Pins A & B are disconnected from the H/T Common pin. When using a Texmate TB-KIT Screw Terminal, J5 has to be opened to disconnect the Test function and enable the Hold function. If both hold and test functions need to be accessed, a Push-On Screw Terminal can be used. **Pins 6, 7, F & H - Signal High Input:** Signal high input for the meter. Full-scale ranges of 2V, 20V or 200V can be selected on the Range Select Header.

Pins 8, 9, J & K - Signal Low Input: Signal low input of the A/D Converter.


Pins 11 & M - AC1 - Live AC Power Input:

Pins 12 & N - AC2 - 110/220V AC Power Select:


Pins 13 & P - AC3 - 110/220V AC Power Select:

Pins 14 & R - AC4 - Neutral AC Power Input:

See below for connections

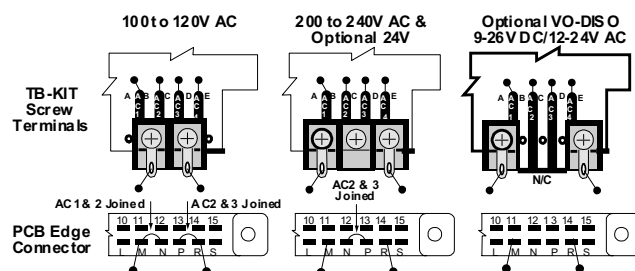

Component Layout

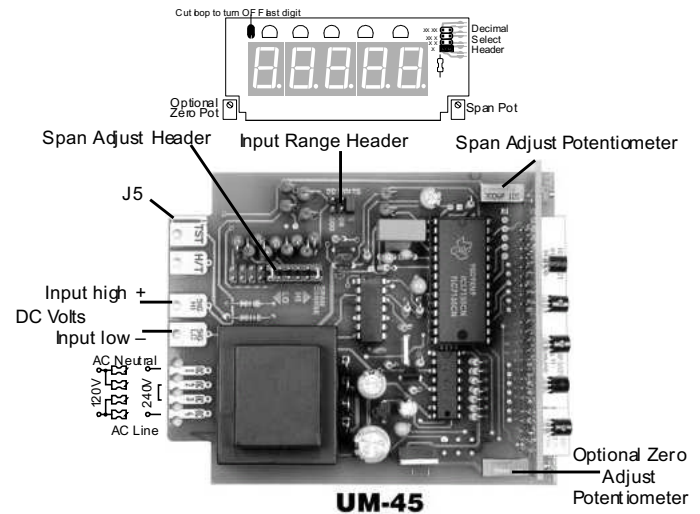

UM-45

Signal Conditioning Components


INPUT RANGE Header
Range values are marked on the PCB. Three positions are provided. After selecting a new range with the single jumper clip, recalibration is required.

SPAN Potentiometer (Pot)

To the Right Front
Turn Clockwise to Increase Reading
The 15 turn SPAN pot is always on the right side (as viewed from the front of the meter). Typical adjustment is 20% of the input signal range.

SPAN ADJUST Header
This unique five-position header expands the adjustment range of the SPAN pot into five equal 20% steps, across 100% of the input Signal Span. Any input Signal Span can then be precisely scaled down to provide any required Digital Display span from ±19999 (40000 counts) to 0001 (one count).

| SPAN Adjust Header position | 1 | 2 | 3 | 4 | 5 |
|-----------------------------|-----|-----|-----|-----|------|
| SPAN Pot % | 20% | 20% | 20% | 20% | 20% |
| Signal Span % | 20% | 40% | 60% | 80% | 100% |




ZERO Potentiometer (Pot)

To the Left Front
Turn Clockwise to Increase Reading
The Optional ZERO pot when installed is to the left of the SPAN pot (as viewed from the front of the meter). Typically it enables the displayed reading to be offset ±1000 counts.


Calibration Procedure

- Select the required full scale voltage range by repositioning the jumper clip on the Range Select Header. A range of 2V, 20V or 200V full scale may be selected.
- Select the required span adjust setting (% of display range) by repositioning the jumper clip on the Span Adjust Header.
- Apply an input of 0 volts. The meter will autozero and display 0000. If the zero needs to be offset use the optional Zero Offset pot.
- Apply a known high input signal that is within the full scale voltage range selected.
- Adjust the Span Pot until the meter displays the required reading for the signal being applied.
- The UM-45 is now calibrated and ready for use. (Whenever a new range is selected, re-calibration is required to meet the specified accuracy).

Decimal Point Selection

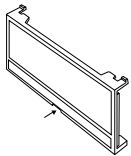


Remove faceplate by inserting a screwdriver blade in the slot at the bottom center of the faceplate. Press blade in to release catch and gently pry face plate outward from the bottom. (see also Case Dimension drawing)

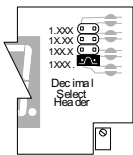

Decimal selection is made on the front of the display board by moving the jumper clip to the desired position on the header.

TB-Kit Screw Connectors

Six Screw Terminals included Free with each UM Series meter

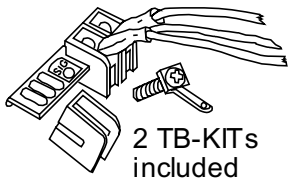


2 TB-KITs included

A TB-KIT consists of 3 insulated Quick Connects and 3 of Texmate's patented individual screw terminal blocks which attach directly to PCB inputs. These provide a Quick Connect tab and screw clamp termination. When using the TB-KIT screw terminal blocks, it is possible to

select between 120V AC and 240V AC power, the optional low voltage switching power supply or the 24V AC power supply by connecting the screw terminals as shown in the diagrams below.

Optional PCB Edge Connector

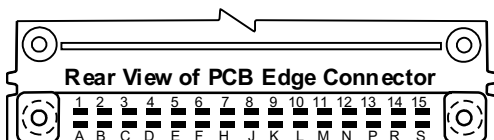


A standard 30 pin edge connector (two rows of 15 pins on 0.156" centers) may also be used to connect the UM-Series. Order part no. CN-L15. For different power supply voltage connection details, see pin connections below.

Selecting Power Supply Voltages

With TB-KIT Screw Terminals


With Optional PCB Edge Connector

For 100 to 120V AC, 50/60 Hz

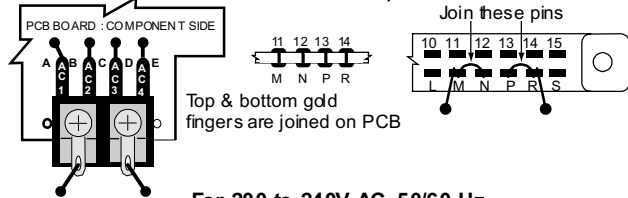


Top & bottom gold fingers are joined on PCB

For 200 to 240V AC, 50/60 Hz or For Optional 24V AC (P.N.:V0-24V)

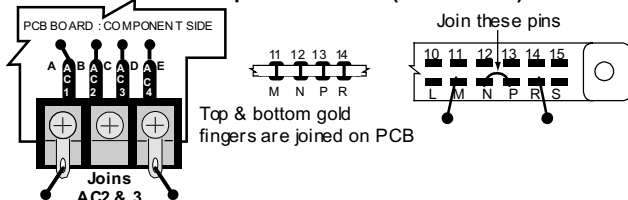

Top & bottom gold fingers are joined on PCB

For Isolated 9-36V DC/12-24V AC, 50/60 Hz Switching Power Supply

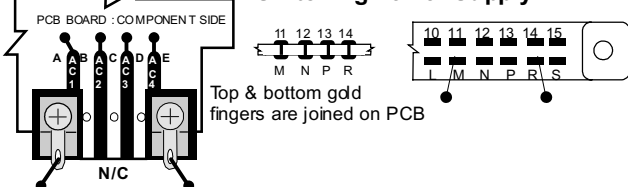


Top & bottom gold fingers are joined on PCB

Push-On Screw Terminals

They provide the greatest convenience and ease of use

Texmate's exclusive optional Push-On Connectors combine an edge card connector and a 10 position screw terminal block. Push-On Connectors are ordered preconfigured for each specific power supply voltage and each optional power supply available for the UM-Series.

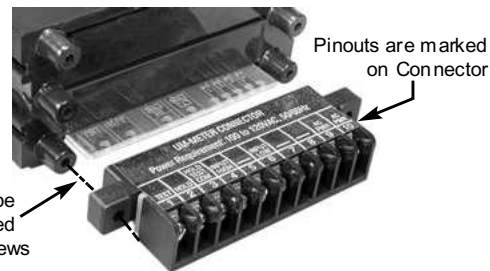


Connector can be securely attached to case with screws

Pinouts are marked on Connector

| | |
|--------------|-------------------------------|
| CN-PUSH/UM | 100/120V AC |
| CN-PUSH/UM01 | 200/240V AC |
| CN-PUSH/UM02 | Switch Selectable 120/240V AC |
| CN-PUSH/UM03 | 24V AC |
| CN-PUSH/UM04 | 9-36V DC/12-24V AC |
| CN-PUSH/UM05 | .5V DC |

Pinout Change-Over Connectors

To replace DPMs in existing panels where matching pinouts are required, Texmate can provide custom pinout Change-over Connectors, either with PCB gold finger terminations, (shown below) or customized versions of Push-On Screw Terminals. (shown above)

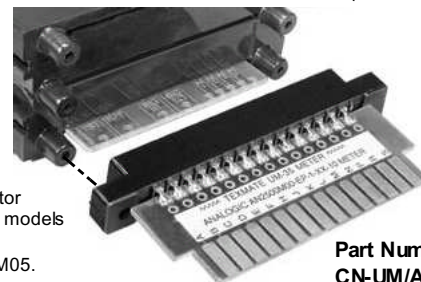

Change-over Connector shown is for Analogic models AN25M02, AN25M03, AN25M04 and AN25M05.


Part Number CN-UM/ANLGC

Face Plate Descriptors

| | | | |
|--------------------|---------------|--------------|------|
| Volts AC | Volts DC | Hz | RPM |
| Amps AC | Amps DC | DC μA | |
| Milliamps AC | Milliamps DC | °C | |
| Millivolts AC | Millivolts DC | °F | |
| Kilowatts | Watts | % | pH |
| kg/cm ² | Kilovolts AC | psi | |
| kWH | kVAR | Power Factor | |
| k Ω | Cos φ | M/min | m/hr |

To customize the face plate, each UM-meter is supplied with a white printed clear adhesive label containing various popular descriptors. Choose the descriptor, peel off the adhesive backing and align the descriptor in the lower right corner of the standard face plate.

Custom Face Plates

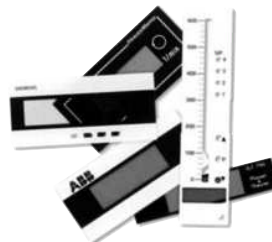

Texmate Produces Thousands of Custom OEM Face Plates

Have Texmate Design and produce a Custom Face Plate for your next project!

• Custom face plates have a non-recurring artwork charge. A serial number is then assigned to each artwork to facilitate reordering.


• Small Run or One-Off custom face plates incur an installation charge, and are generally printed on a special plastic film, which is then laminated to custom faceplate blanks as required.

• Large Run (250 pieces min): custom face plates are production silk screened, issued a part number, and held in stock for free installation as required by customer orders.

• OEMs may also order Custom Meter Labels, Box Labels, Custom Data Sheets and Instruction Manuals.

UM Case Dimensions and Panel Cutouts

This NEMA Case will fit any existing cutout with dimensions that are between the Snug and Loose Fitting dimensions shown below.

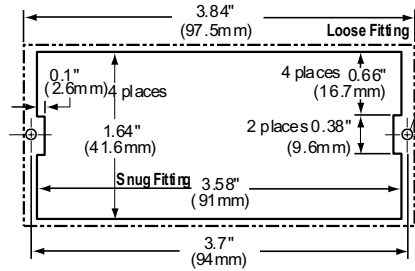


Panel Cutout for Front Panel Removal

To enable removal of the panel meter from a mounting panel without requiring rear access, make the panel cutout as shown above, using the mounting plate supplied with the meter as a template. The mounting holes should then be tapped to match the mounting screws.

To remove the face plate, carefully insert screwdriver blade at bottom slot to release catch and gently pry outward to release the plate.

For new installations see Optimum Panel Cutout or Panel Cutout for Front Panel Removal

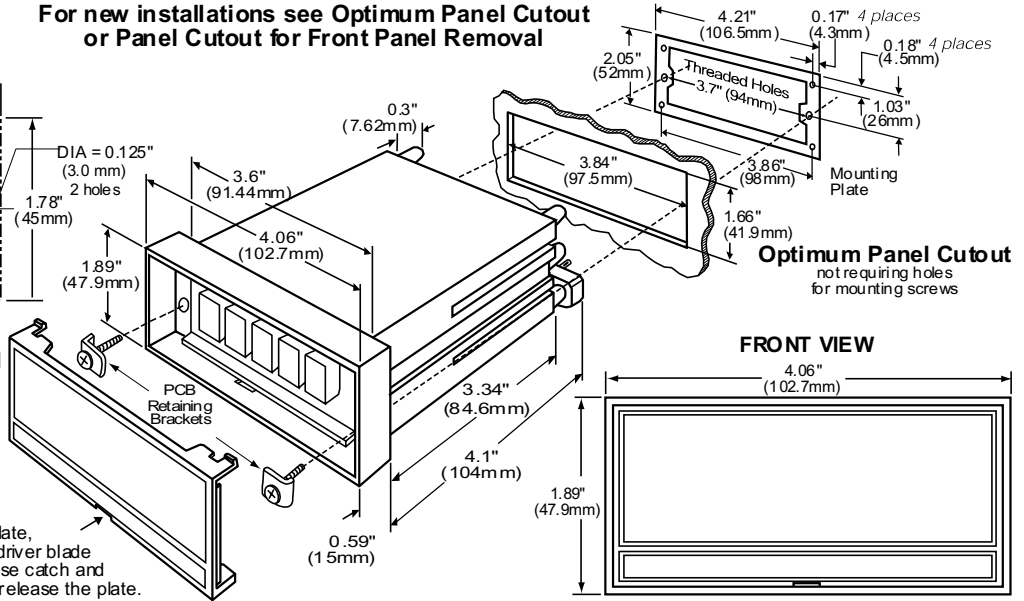

Ordering Information

Standard Options for this Model Number

| Part Number | Description | List |
|--|---|-----------|
| ► BASIC MODEL NUMBER Includes 2 TB-KITs, standard display and standard power supply unless optional versions are ordered. | | |
| UM-45 |DPM, DC Volts, $\pm 2V \pm 20V/\pm 200V$ DC Header selectable ranges | \$129 |
| ► DISPLAY | | |
| STANDARD |0.56" Red LEDs |N/C |
| UM-BRIGHT4 |Display: .56 inch, Super bright Red LEDs |\$25 |
| UM-GREEN4 |Display: .56 inch, Green LEDs |\$15 |
| ► POWER SUPPLY | | |
| STANDARD |100/120 or 200/240VAC User selectable |N/C |
| V0-DC/ISO |Isolated auto-sensing AC/DC 9 to 36V DC/12 to 24V AC |\$35 |
| V0-24V |Isolated transformer 12V AC or 24V AC user selectable |\$15 |
| V0-5V DC |Non-isolated 5V DC only |\$10 |
| ► SPECIAL OPTIONS (Specify Inputs or Outputs & Req. Reading) | | |
| HD-CHANGE |Range change from the standard input as shown in BOLD type |\$7 |
| V0-50K |Zero offset Potentiometer 50K |\$5 |
| CB-FS45 |Non-Std Range and Scale changes for UM-45s |\$20 |

Special Options and Accessories

| Part Number | Description | List |
|---|---|------------|
| ► ACCESSORIES (Specify Serial # for Custom Artwork Installation) | | |
| 75-RPCLEAR |Replacement Clear Lens for meter |\$2 |
| 75-RPFILTER |Replacement Red Lens for meter |\$2 |
| CN-L15 |Connector: Dual Row, 30 Pin Edge Conn, 0.156" ctr |\$4 |
| CN-PUSH/UM |Connector: Push-on Terminal Block, 120V AC Pwr |\$18 |
| CN-PUSH/UM01 |Connector: Push-on Terminal Block, 200-240V AC Pwr |\$18 |
| CN-PUSH/UM02 |Connector: Push-on Terminal Block, 120/240V AC select |\$20 |
| CN-PUSH/UM03 |Connector: Push-on Terminal Block, 24V AC pwr |\$18 |
| CN-PUSH/UM04 |Connector: Push-on Terminal Block, 9 to 36V DC/12 to 24V AC |\$18 |
| CN-PUSH/UM05 |Connector: Push-on Terminal Block, 5V DC |\$18 |
| CN-UM/ANLGC |Connector: Pinout Changer to match Analogic AN20M02 etc |\$30 |
| RP-CASE |Case: Replacement with Mounting Hardware |\$10 |
| TB-KIT |Connector: extra Screw Terminal Blocks (3 sets=1 kit) |\$1 |
| ART-FS-S/D |NRC for Artwork & set-up Custom Faceplate and or Descriptor |\$35 |
| ART-FS-S/D/C |NRC for Artwork & set-up Custom Faceplate and Custom Logo |\$75 |
| ART-FS-001 |Produce & Install Custom Faceplate per meter - 1 color no-min |\$10 |
| ART-FS-002 |Produce & Install Custom Faceplate per meter - 2 color no-min |\$20 |
| ART-FS-003 |Produce & Install Custom Faceplate per meter - 3 color no-min |\$30 |
| ART-FUM-001 |Custom Faceplate, 100 piece Min. (\$3.00 each) - 1 color |\$300 |
| ART-FUM-002 |Custom Faceplate, 100 piece Min. (\$4.20 each) - 2 color |\$420 |
| ART-FUM-003 |Custom Faceplate, 100 piece Min. (\$5.40 each) - 3 color |\$540 |

Many other options and accessories are available. See full price list for more details. Prices subject to change without notice.

WARRANTY

Texmate warrants that its products are free from defects in material and workmanship under normal use and service for a period of one year from date of shipment. Texmate's obligations under this warranty are limited to replacement or repair, at its option, at its factory, of any of the products which shall, within the applicable period after shipment, be returned to Texmate's facility, transportation charges pre-paid, and which are, after examination, disclosed to the satisfaction of Texmate to be thus defective. The warranty shall not apply to any equipment which shall have been repaired or altered, except by Texmate, or which shall have been subjected to misuse, negligence, or accident. In no case shall Texmate's liability exceed the original purchase price. The aforementioned provisions do not extend the original warranty period of any product which has been either repaired or replaced by Texmate.

USER'S RESPONSIBILITY

We are pleased to offer suggestions on the use of our various products either by way of printed matter or through direct contact with our sales/application engineering staff. However, since we have no control over the use of our products once they are shipped, NO WARRANTY WHETHER OF MERCHANTABILITY, FITNESS FOR PURPOSE, OR OTHERWISE is made beyond the repair, replacement, or refund of purchase price at the sole discretion of Texmate. Users shall determine the suitability of the product for the intended application before using, and the users assume all risk and liability whatsoever in connection therewith, regardless of any of our suggestions or statements as to application or construction. In no event shall Texmate's liability, in law or otherwise, be in excess of the purchase price of the product.

Texmate cannot assume responsibility for any circuitry described. No circuit patent or software licenses are implied. Texmate reserves the right to change circuitry, operating software, specifications, and prices without notice at any time.



995 Park Center Drive • Vista, CA 92081-8397

Tel: 1-760-598-9899 • USA 1-800-839-6283 • That's 1-800-TEXMATE

Fax: 1-760-598-9828 • Email: sales@texmate.com • Web: www.texmate.com

Texmate has facilities in Japan, New Zealand, Taiwan, and Thailand. We also have authorized distributors throughout the USA and in 28 other countries.

For product details visit www.texmate.com

Local Distributor Address